

MF□-R□5 Series

Individual Wiring Type Manifold
Bar Type

MFU□-RC5

common SUP, common EXH,
port 1,3 & 5 on both sides

MFU□-RD5

Common SUP, common EXH,
port 1,3 & 5 on one side



PC/RC5_13

Manifold Specifications

Type of manifold		MFU□-RC5	MFU□-RD5
		common SUP, common EXH, port 1,3 & 5 on both sides	common SUP, common EXH, port 1,3 & 5 on one side
Port size	Port 1	Rc½(Both side)	Rc½(One side)
	Port 3, 5	Rc½(Both side)	Rc½(One side)
	Port 2, 4	M5	M5
	Port Y	—	—
	Port X	—	—
N: Number of stations		2~20	2~20
Mountable solenoid valve		RCS245-※-※-MF RCD245-※-※-MF RCD345-※-※-MF RCE345-※-※-MF RCO345-※-※-MF	
Blank plate		PC5-BP	

Optional Parts and Spare parts

Parts Name		Model No.
Blank plate	For individual exhaust of pilot	PC5-BP

Manifold



Type of manifold

MFU: Ported on the valve body,
port 2 & 4

Port size 2&4

M5: M5×0.8


N: Number of stations

2 : 2 stations
⋮
10 : 10 stations

Mountable solenoid valve series


RC5: common SUP, common EXH, port 1,3 & 5 on both sides
RD5: common SUP, common EXH, port 1,3 & 5 on one side

Mountable solenoid valve




Model No.


RCS245



RCD245




RCD345



RCE345



RCO345



For mounting on manifold

MF: For mounting on manifold
Note: A gasket & two mounting
screws come with valve.

Manual override

No mark: Standard (Non locking)
※LB : With locking button

Wiring

L : Lead wire
SP: Connector with lead wire

Voltage

110: AC110V
220: AC220V
D24: DC24V

Port size

M5: M5×0.8

Special specifications

No mark : Standard (Individual exhaust of pilot)




※: Made to order


MFU□-RC5-M5

(Unit: mm)

Note: Standard manifold is plugged on "R" (Right) side ports.

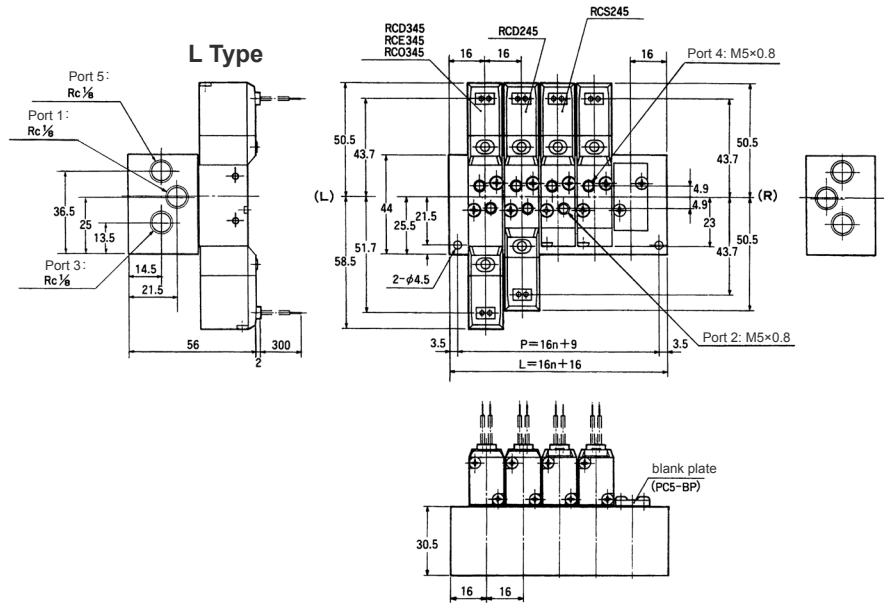

SP Type

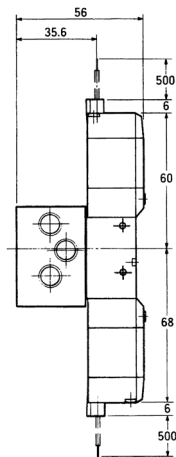


n	P	L	n	P	L
—	—	—	11	185	192
2	41	48	12	201	208
3	57	64	13	217	224
4	73	80	14	233	240
5	89	96	15	249	256
6	105	112	16	265	272
7	121	128	17	281	288
8	137	144	18	297	304
9	153	160	19	313	320
10	169	176	20	329	336

n: Number of stations


MFU□-RD5-M5

(Unit: mm)

Note: Standard manifold is plugged on "R" (Right) side ports.

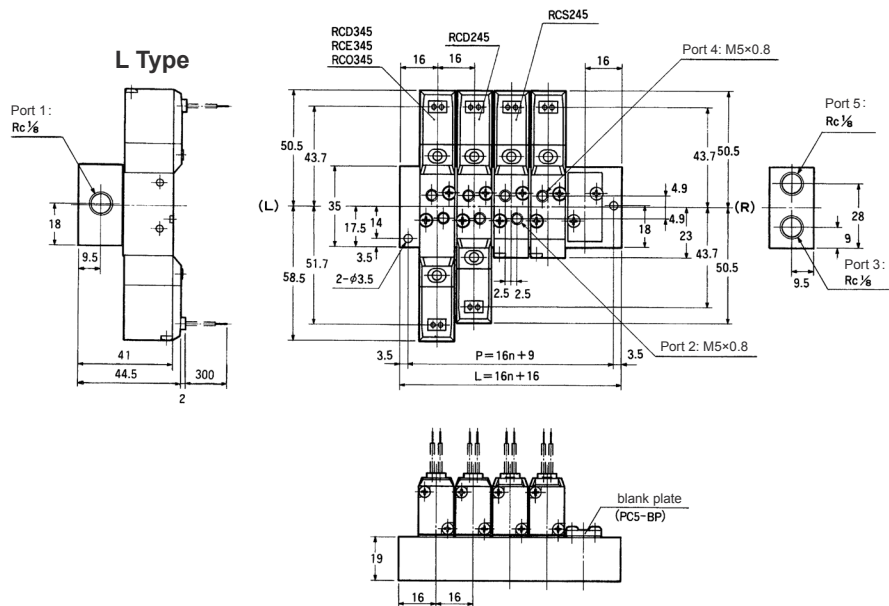

SP Type

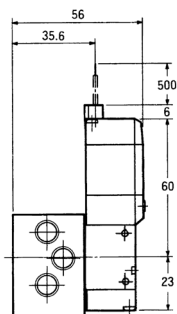

n	P	L	n	P	L
—	—	—	11	185	192
2	41	48	12	201	208
3	57	64	13	217	224
4	73	80	14	233	240
5	89	96	15	249	256
6	105	112	16	265	272
7	121	128	17	281	288
8	137	144	18	297	304
9	153	160	19	313	320
10	169	176	20	329	336

n: Number of stations